


FRONT VIEW

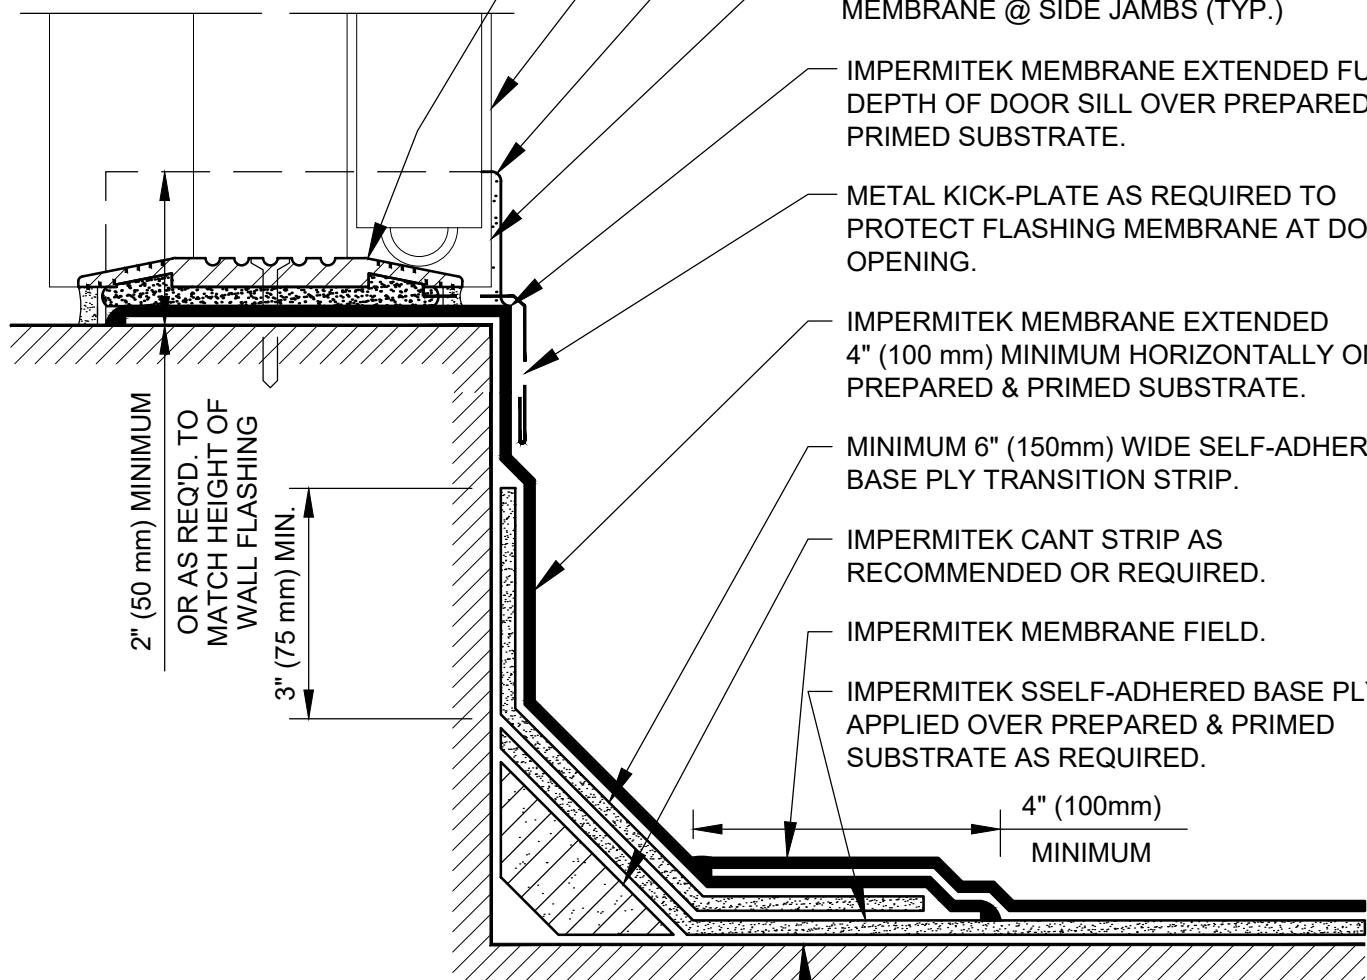

- REMOVE METAL SILL PLATE TO INSTALL IMPERMITEK MEMBRANE & RESET IN FULL BED OF ACCEPTABLE SEALANT.
- REMOVE EXISTING SEALANT BETWEEN DOOR FRAME & JAMB AS REQUIRED TO INSTALL MEMBRANE.
- APPLY IMPERMITEK MEMBRANE ONTO DOOR OPENING SIDE JAMBS EXTENDING & TERMINATED BEHIND DOOR FRAME.
- APPLY ACCEPTABLE SEALANT BETWEEN DOOR FRAME & IMPERMITEK FLASHING MEMBRANE @ SIDE JAMBS (TYP.)
- IMPERMITEK MEMBRANE EXTENDED FULL DEPTH OF DOOR SILL OVER PREPARED & PRIMED SUBSTRATE.
- METAL KICK-PLATE AS REQUIRED TO PROTECT FLASHING MEMBRANE AT DOOR OPENING.
- IMPERMITEK MEMBRANE EXTENDED 4" (100 mm) MINIMUM HORIZONTALLY ONTO PREPARED & PRIMED SUBSTRATE.
- MINIMUM 6" (150mm) WIDE SELF-ADHERED BASE PLY TRANSITION STRIP.
- IMPERMITEK CANT STRIP AS RECOMMENDED OR REQUIRED.
- IMPERMITEK MEMBRANE FIELD.
- IMPERMITEK SSELF-ADHERED BASE PLY APPLIED OVER PREPARED & PRIMED SUBSTRATE AS REQUIRED.
- 4" (100mm) MINIMUM
- ACCEPTABLE SUBSTRATE PREPARED AS PER IMPERMITEK'S REQUIREMENTS.

NOTE: THIS DETAIL DRAWING IS PROVIDED BY IMPERMITEK FOR THE SOLE PURPOSE OF OBTAINING PROJECT WARRANTY & NOT AS A SUBSTITUTE FOR PROFESSIONAL DESIGN SERVICES. IMPERMITEK MAKES NO REPRESENTATION OR WARRANTY WITH REPECT TO CODE COMPLIANCE OR SUITABILITY FOR ANY PROJECT SPECIFIC CONDITIONS.

IMPERMITEK
Advanced Seamless Technologies



Tel: +1 (780) 690-2299
Email: technical@impermitek.com
Website: www.impermitek.com

TITLE:

IMPERMITEK WATERPROOFING TYPICAL DOOR SILL FLASHING

PROJECT:

DRAWN BY: DRW

NO.:

DATE:

REVISION:

0

DATE: 3-1-2025

DRAWING NUMBER:

SCALE: NTS

PH-M02B

PH_M02B